



SMITH & WESSON SHIELD ENHANCED FEEL TRIGGER SHOE INSTALLATION INSTRUCTIONS

Thank you for purchasing this Timney Trigger. It has been designed and manufactured to provide you with a lifetime of dependable service. Each trigger is hand tested and calibrated on an action specific to your platform before leaving our factory. Please read these instructions fully before you begin installing the trigger, you'll be glad you did.

TOOLS INCLUDED:

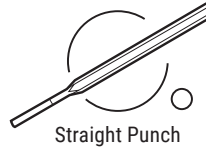

TOOLS NEEDED:

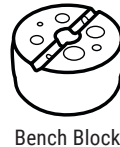

**IF YOU HAVE TROUBLE CHECK OUT TROUBLESHOOTING STEPS ON
WWW.TIMNEYTRIGGERS.COM OR CONTACT US**

Need help with your install? Contact our customer service team via phone or email for assistance.
Phone: 623-223-1111 Fax: 623-223-1112 Support: technicalsupport@timneyusa.com

TIMNEY TRIGGER GUARANTEE

Material and workmanship: This Timney trigger has been carefully inspected, tested and adjusted to give a lifetime of dependable service. Every possible care has been exercised in its design and construction. If any defect in workmanship or material should develop under conditions of normal use and service, any necessary repairs, including parts and labor will be made at NO CHARGE to the purchaser providing that our inspection reveals parts were not damaged through accident, alteration, misuse, abuse or other causes beyond our control. We neither assume nor imply any oral or statutory warranties, and we neither assume nor authorize any person to assume for us any obligation or liability in connection with this trigger. Repairs or disassembly of this trigger in any manner without specific authorization, voids the guarantee.

- 1 Before beginning any work on your firearm, make sure the magazine is removed and double check to ensure the chamber is empty.
- 2 Remove slide from frame.
- 3 Remove take down lever by rotating it up until it stops, then pull it out.
- 4 Use a punch to remove the front locking block pin and trigger pivot pin from right to left. Then remove the locking block.
- 5 Remove trigger with trigger bar. Be careful not to bend the back of the trigger bar.
- 6 Rest trigger on bench block and punch out the trigger pivot pin with provided punch. Then remove trigger bar from factory trigger.
- 7 On the Timney trigger, back out the screw using the provided hex key wrench until the slot for the trigger bar is clear.
- 8 Line up the hole on the trigger bar with the pivot hole on the trigger, tighten with hex key until snug. Be sure not to over tighten.
- 9 Now you're ready to install your Timney trigger! Reinsert the trigger with trigger bar into the frame. Start with the back then rotate the trigger shoe into the trigger cavity.
- 10 Now place the slide locking block back into the frame. Make sure the trigger is aligned in the middle of the locking block as you push it all the way in.
- 11 Using a punch as an alignment pin, push it through the trigger pivot pin hole and spring, then reinstall the trigger pivot pin. *Note: Make sure the trigger pivot pin goes through the spring attached to the trigger bar.*
- 12 Perform a function check to ensure the trigger returns on its own without binding.
- 13 Now, replace the front locking block pin, then reinsert the take down lever.
- 14 Rotate the take down lever clockwise and install your slide.
- 15 Perform a final safety and function check.
- 16 You are now ready to enjoy your Timney Trigger!

